




### FORMING DRAWING


Package: Bending technique.

Before forming

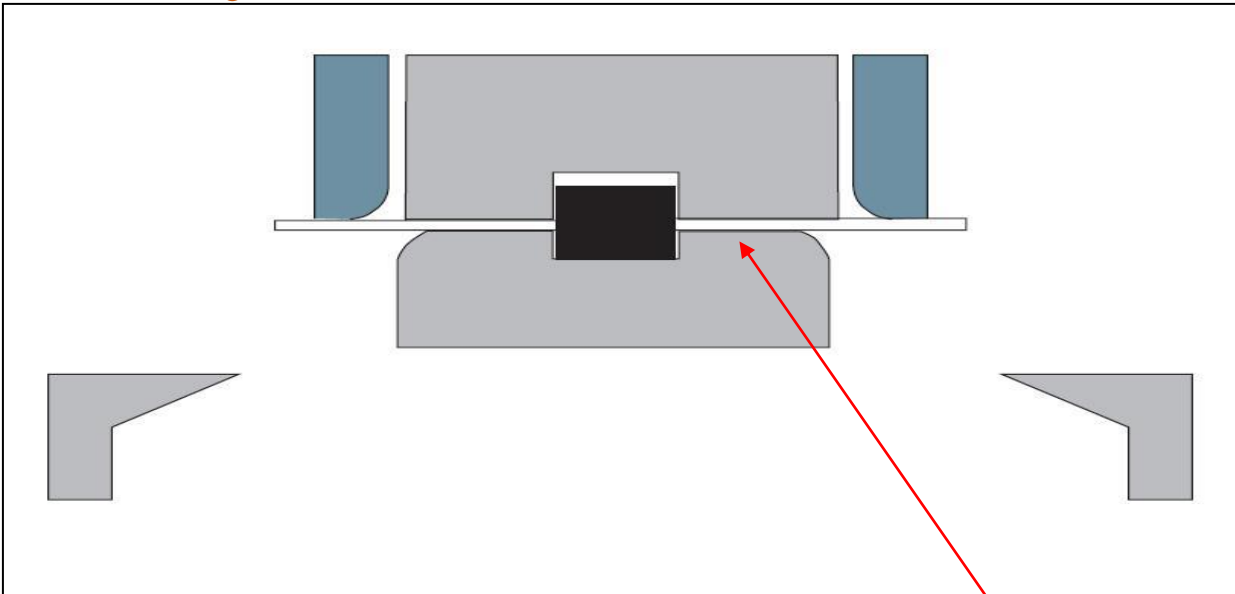

Firmly clamp and give ample support to the leads of the device in the forming jig while isolating the device body.

After forming

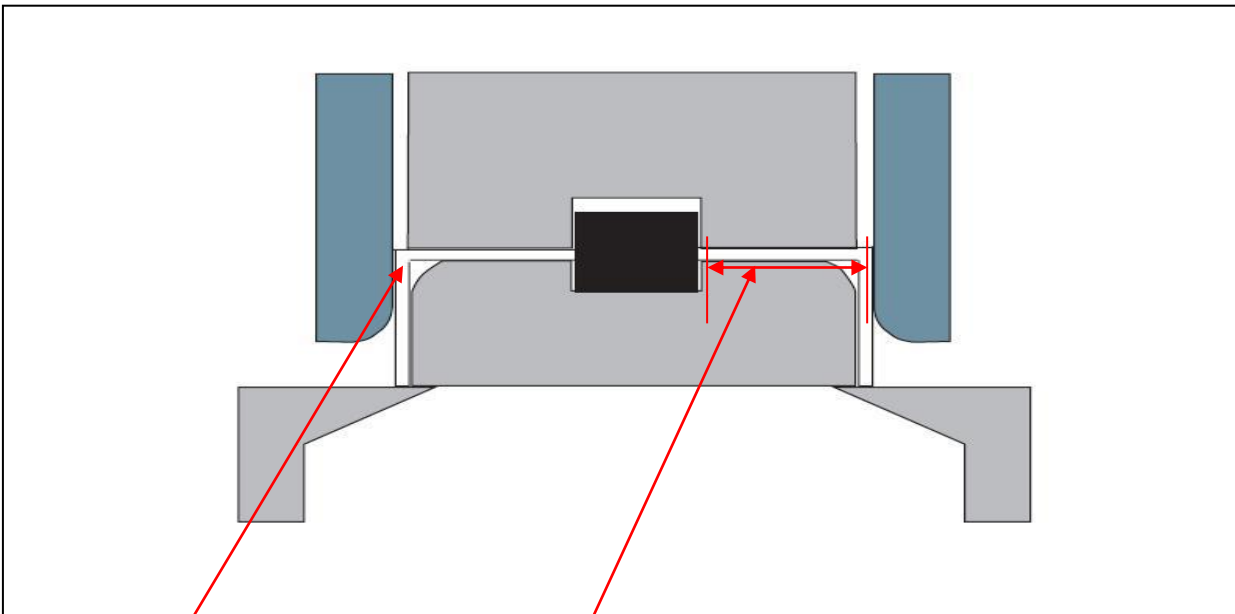

The distance between center of bending point and body must be more than 3mm and force less than 1KGF. Maintain firm pressure on leads next to body until bend is complete to avoid any excess mechanical stress to interior cavity.

**Bending point.**

**Distance between bending point and body.**